

MAXIMUM FRAME	DP	IMPACT
149 x 81.75	+55/-55	NO

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use #8 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42).
- Install corrosion resistant (2)- 1/4"x 3" Tapcon screws through each hinge into rough opening.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

- The product shown herein is designed tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- Use structural or composite shims where required.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.



This item has been digitally signed and sealed by Michael D. Stremmel. PE or the date adjacent to the seal. Printed copies of this document are no considered signed and sealed and the signature must be verified on any electronic copies

2023.09.28 16:20:23 -04'00'

MICHAEL D. STREMMEL, P.E. Florida P.E. No. 65868, REG. No. 37122 1410 Eden Road York, PA. 17406 (717) 916-6300

	DATE: 08/	02/2023	
DRAWN BY: M.HAM	SCALE:	NTS	
CHECKED BY: D.VEZO	TITLE:	0 1	
APPROVED BY:	1	Conto	u

TELEWEN KLAMATH FALLS OR, 97601

3737 LAKEPORT BLVD. PHONE: (800) 535-3936


Contours Steel Inswing Glazed 12-0 x 6-8 OXXO


D1000351 REPORT No.: NCTL-110-11987-1

D.VEZO

CAD DWG. No.:

SHEET 1 of 10

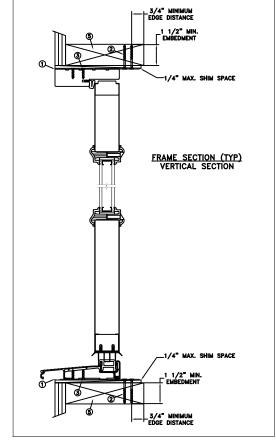

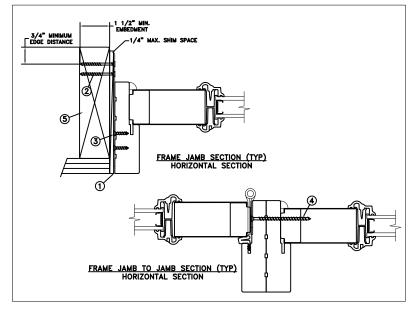

MAXIMUM FRAME	DP	IMPACT
149 x 81.75	+55/-55	NO

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use 2 #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
- Use 2 #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visability or collateral damage to product.
- Install corrosion resistant (2)- 1/4"x 3" Tapcon screws through each hinge into rough opening.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

- The product shown herein is designed tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- 3. Use structural or composite shims where required.
- Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

TYPICAL ELEVATION WITH FASTENER SPACING

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.




6" FROM


This item has been digitally signed and sealed by Michael D. Stremmel. PE or the date adjacent to the seal. Printed copies of this document are no considered signed and sealed and the signature must be verified on any electronic copies.

MICHAEL D. STREMMEL, P.E. Florida P.E. No. 65868, REG. No. 37122


1410 Eden Road York, PA. 17406 (717) 916-6300

	DATE: 08/0	02/2023	TET	TO-SATER	T	373	37 LAKEPORT BLVD.
DRAWN BY: M.HAM	SCALE:	NTS	JEL	DWE	KL	amat Phoi	ГН FALLS OR, 97601 NE: (800) 535-3936
CHECKED BY: D.VEZO	TITLE:		I			_	2.01840
APPROVED BY: D.VEZO		Conto	ours Steel :	Inswing Glazed :	12-0	x 6-	8 OXXO
D1000351							
REPORT No.: NCTL-110-11987	 7-1			CAD DWG. No.:	REV:	С	SHEET 2 of 10

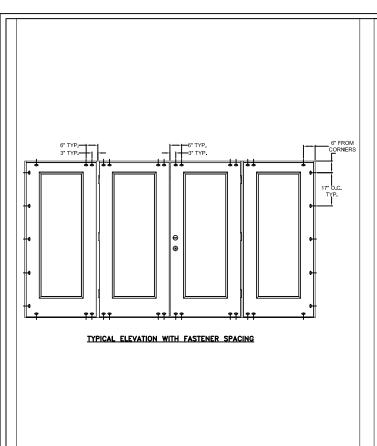

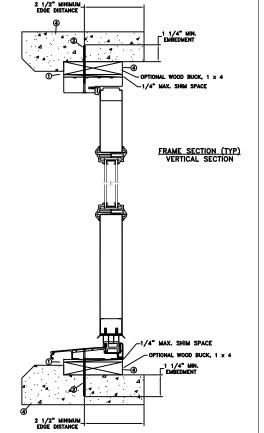

CONCRETE/MASONRY INSTALLATION

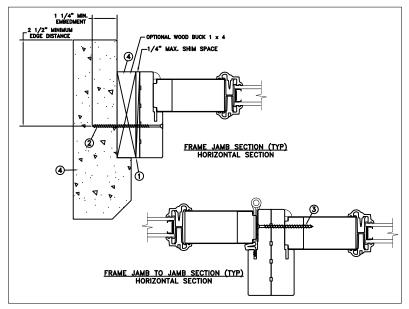

MAXIMUM FRAME	DP	IMPACT
149 x 81.75	+55/-55	NO

Installation Notes:

- 1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1 1/4" into concrete or masonry at each location with a 2 1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
- 3. Install corrosion resistant (2)- 1/4"x 3" Tapcon screws through each hinge into rough opening.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria
 of the adopted International Building Code (IBC), the International Residential Code (IRC), the current
 Florida Building Code (FBC) and the industry requirement for the stated conditions.
- 2. All glazing shall conform to ASTM E1300.
- 3. Use structural or composite shims where required.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.





This item has been digitally signed and sealed by Michael D. Stremmel, PE on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

2023.09.28 16:20:23-0400'
MICHAEL D. STREMMEL, P.E.


MICHAEL D. SIREMMEL, F.L. Florida P.E. No. 65868, REG. No. 37122 1410 Eden Road York, PA. 17406 (717) 916-6300

	DATE: 08/02/2023	3737 LAKEPORT BLVD KLAMATH FALLS OR, 9760.
DRAWN BY: M. HAM	SCALE: NTS	PHONE: (800) 535-393
CHECKED BY: D.VEZO	TITLE:	
APPROVED BY: D.VEZO	Conto	tours Steel Inswing Glazed 12-0 x 6-8 OXXO
D1000351		
REPORT No.: NCTL-110-11987		CAD DWG, No.: REV: C SHEET 3 of 10

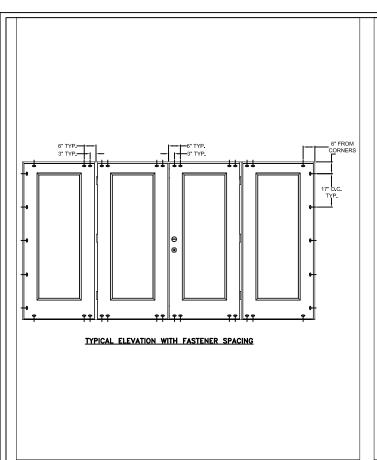

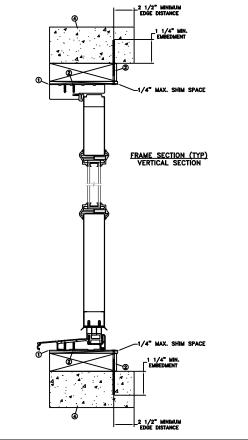

CONCRETE/MASONRY INSTALLATION

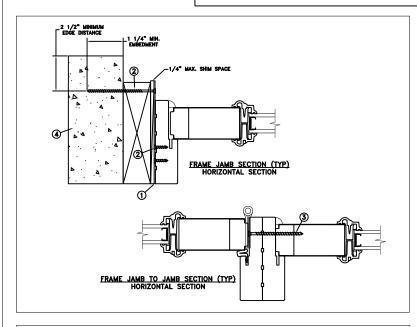

MAXIMUM FRAME	DP	IMPACT
149 x 81.75	+55/-55	NO

Installation Notes:

- 1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use (1) 1/4" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1 1/4" into concrete or masonry at each location with a 2 1/2" min. from edge distance. Use (2) #8 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
- 3. Install corrosion resistant (2)- 1/4"x 3" Tapcon screws through each hinge into rough opening.
- 4. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria
 of the adopted International Building Code (IBC), the International Residential Code (IRC), the current
 Florida Building Code (FBC) and the industry requirement for the stated conditions.
- 2. All glazing shall conform to ASTM E1300.
- 3. Use structural or composite shims where required.
- 4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.




This item has been digitally signed and sealed by Michael D. Stremmel, PE on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

MICHAEL D. STREMMEL, P.E. Florida P.E. No. 65868, REG. No. 37122


No. 65868, REG. No. 37122 1410 Eden Road York, PA. 17406 (717) 916-6300


	DATE: 08/02/2023		3737 LAKEPORT BLVE KLAMATH FALLS OR, 9760				
DRAWN BY: M.HAM	SCALE: NTS	jely 🕶	PHONE: (800) 535-393				
CHECKED BY: D.VEZO	TITLE:						
APPROVED BY: D.VEZO	Conto	ours Steel Inswing Gi	lazed 12-0 x 6-8 OXXO				
D1000351							
REPORT No NCTL-110-11987	 7-1	CAD DWG, No.;	REV: C SHEET 4 of 10				

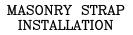

IMPACT

+55/-55

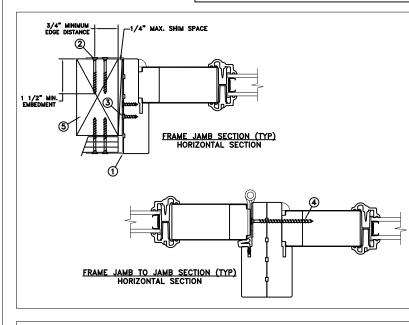

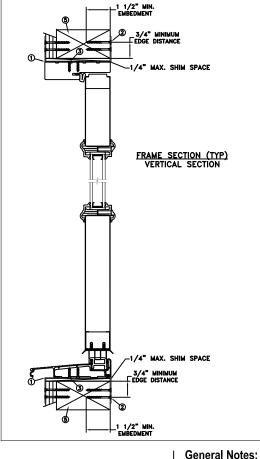

Installation Notes:

TYPICAL ELEVATION WITH FASTENER SPACING

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use min. 2 #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.42).
- Use min. 2 #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visability or collateral damage to product.
- Install corrosion resistant (2)- 1/4"x 3" Tapcon screws through each hinge into jamb.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

This item has been digitally signed and sealed by Michael D. Stremmel. PE or the date adjacent to the seal. Printed copies of this document are no considered signed and sealed and



6" FROM

MICHAEL D. STREMMEL, P.E. Florida P.E. No. 65868, REG. No. 37122 1410 Eden Road York, PA. 17406


(717) 916-6300


any electronic copies


- The product shown herein is designed tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- Use structural or composite shims where required.
- Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

MAXIMUM FRAME


149 x 81.75

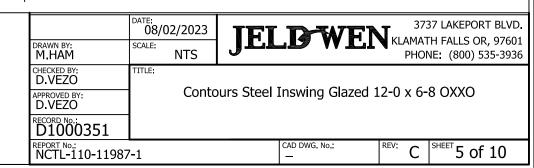

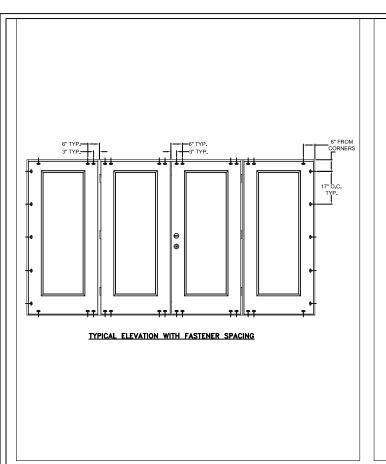

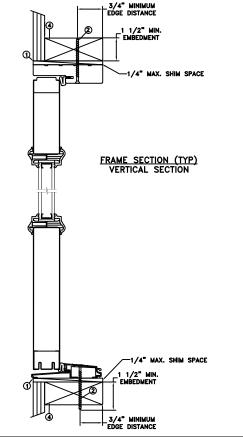

THROUGH FRAME INSTALLATION

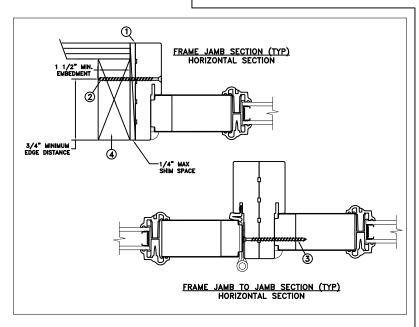

MAXIMUM FRAME	DP	IMPACT
149 x 80.875	+55/-55	NO

Installation Notes:

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use #8 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42).
- Install corrosion resistant (2)- 1/4"x 3" Tapcon screws through each hinge into rough opening.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

- The product shown herein is designed tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- Use structural or composite shims where required.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.



This item has been digitally signed and sealed by Michael D. Stremmel. PE or the date adjacent to the seal. Printed copies of this document are no considered signed and sealed and the signature must be verified on any electronic copies.

2023.09.28 16:20:23 -04'00'

MICHAEL D. STREMMEL, P.E. Florida P.E. No. 65868, REG. No. 37122 1410 Eden Road York, PA. 17406 (717) 916-6300

_			
		DATE: 08/02/2023	
	DRAWN BY: M.HAM	SCALE: NTS	
	CHECKED BY:	TITLE:	

JELBWEN KLAMATH FALLS OR, 97601

Contours Steel Outswing Glazed 12-0 x 6-8 OXXO

3737 LAKEPORT BLVD.

PHONE: (800) 535-3936


APPROVED BY: D.VEZO


REPORT No.: NCTL-110-11987-1


D1000351


CAD DWG. No.:

SHEET 6 of 10

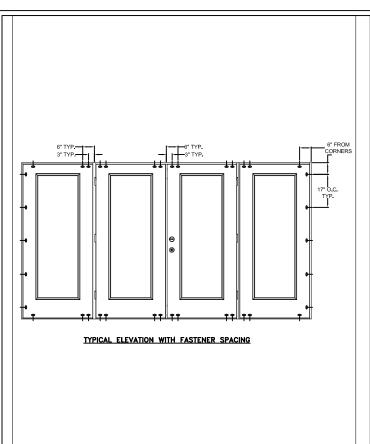

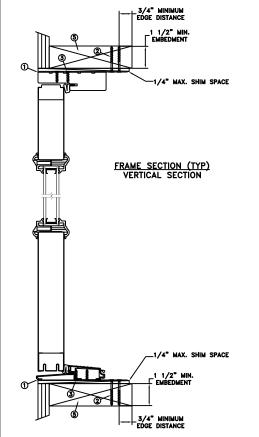

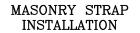

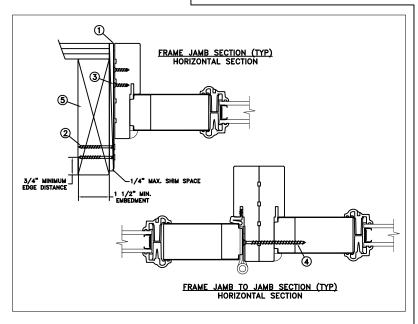

MAXIMUM FRAME	DP	IMPACT
149 x 80.875	+55/-55	NO

- 1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use 2 #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum
 of 1 1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
- 3. Use 2 #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visability or collateral damage to product.
- 4. Install corrosion resistant (2)- 1/4"x 3" Tapcon screws through each hinge into rough opening.
- 5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

- 1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- 3. Use structural or composite shims where required.
- 4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.





This item has been digitally signed and sealed by Michael D. Stremmel, PE on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

MICHAEL D. STREMMEL, P.E. Florida P.E. No. 65868, REG. No. 37122


D. SIREMMEL, F.E.
No. 65868, REG. No. 37122
1410 Eden Road
York, PA. 17406
(717) 916-6300

	DATE: 08/0	02/2023	TET	DWE	T	37:	37 LAKEPORT BLVD
DRAWN BY: M.HAM	SCALE:	NTS	عندل ا	اند ۷۷ کار	KL	AMA PHOI	NE: (800) 535-3936
CHECKED BY: D.VEZO	TITLE:				40.6		0.000
APPROVED BY: D.VEZO		Conto	urs Steel C	Outswing Glazed	12-0) X 6	-8 OXXO
D1000351							
REPORT No.: NCTL-110-11987	7-1			CAD DWG. No.:	REV:	С	SHEET 7 of 10

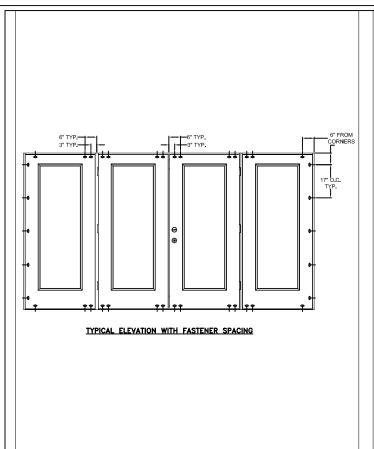

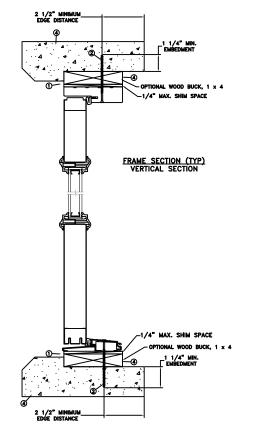



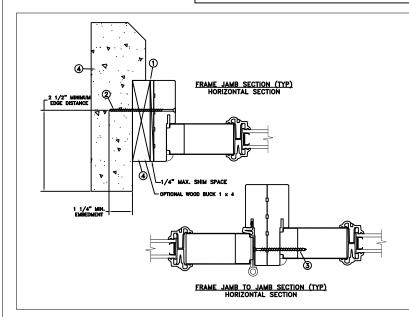

MAXIMUM FRAME	DP	IMPACT
149 x 80.875	+55/-55	NO

- 1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- 2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1 1/4" into concrete or masonry at each location with a 2 1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
- 3. Install corrosion resistant (2)- 1/4"x 3" Tapcon screws through each hinge into rough opening.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

- 1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- Use structural or composite shims where required.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.




2023.09.28 16:20:23 -04'00'


This item has been digitally signed and sealed by Michael D. Stremmel, PE on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

MICHAEL D. STREMMEL, P.E. Florida P.E. No. 65868, REG. No. 37122


D. SIREMMEL, P.E.
No. 65868, REG. No. 37122
1410 Eden Road
York, PA. 17406
(717) 916-6300

	DATE: 08/0	02/2023	TET	DWE!		373	37 LAKEPORT BLV	/D.
DRAWN BY: M.HAM	SCALE:	NTS	JÆŁ	LE WE	, W KL	AMAT IOH9	TH FALLS OR, 976 NE: (800) 535-39	01 036
CHECKED BY: D.VEZO	TITLE:							
APPROVED BY: D.VEZO		Conto	urs Steel Outswing Glazed 12-0 x 6-8 OXXO					
D1000351								
REPORT No.: NCTL-110-11987	 '-1			CAD DWG. No.:	REV:	\overline{c}	SHEET 8 of 10	

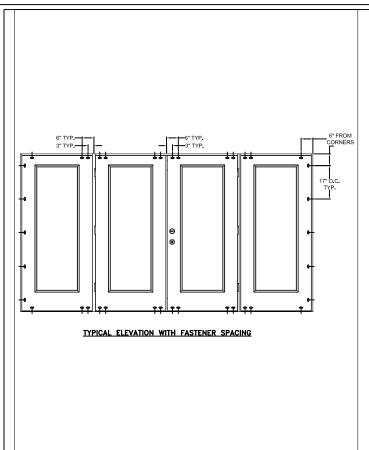

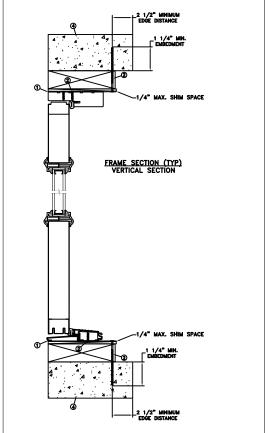



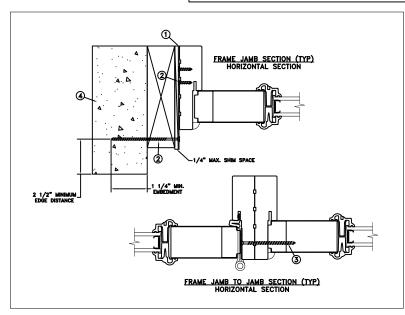

MAXIMUM FRAME	DP	IMPACT
149 x 80.875	+55/-55	NO

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use (1) 1/4" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1 1/4" into concrete or masonry at each location with a 2 1/2" min. from edge distance. Use (2) - #8 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
- Install corrosion resistant (2)- 1/4"x 3" Tapcon screws through each hinge into rough opening.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

- The product shown herein is designed tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- Use structural or composite shims where required.
- Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.



MICHAEL D. STREMMEL, P.E. Florida P.E. No. 65868, REG. No. 37122


1410 Eden Road York, PA. 17406 (717) 916-6300


any electronic copies.

This item has been digitally signed and

	DATE: 08/02/2023	TITT TO-SATER	37:	37 LAKEPORT BLVD	
DRAWN BY: M.HAM	SCALE: NTS	JELD WEI		TH FALLS OR, 97601 NE: (800) 535-3936	
CHECKED BY: D.VEZO	TITLE:			0.000	
APPROVED BY: D.VEZO	Conto	ours Steel Outswing Glazed 12-0 x 6-8 OXXO			
D1000351					
REPORT No.: NCTL-110-11987	·	CAD DWG. No.:	REV: C	SHEET 9 of 10	



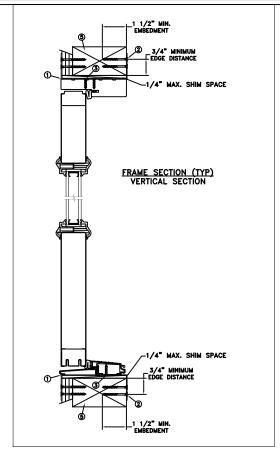

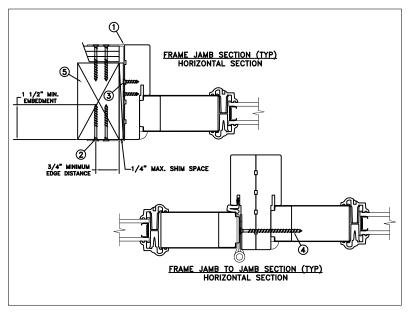

MAXIMUM FRAME	DP	IMPACT
149 x 80.875	+55/-55	NO

- 1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use min. 2 #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.42).
- 3. Use min. 2 #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visability or collateral damage to product.
- 4. Install corrosion resistant (2)- 1/4"x 3" Tapcon screws through each hinge into jamb.
- 5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

TYPICAL ELEVATION WITH FASTENER SPACING

DISCLAIMER

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

This item has been digitally signed and sealed by Michael D. Stremmel, PE on the seal. Printed the seal adjacent to the seal. Printed the seal of the signature must be verified on any electronic copies.

Mil O Smit

6" FROM

MICHAEL D. STREMMEL, P.E. Florida P.E. No. 65868, REG. No. 37122 1410 Eden Road York, PA. 17406 (717) 916-6300

General Notes:

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria
 of the adopted International Building Code (IBC), the International Residential Code (IRC), the current
 Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- Use structural or composite shims where required.
- 4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

