PAGE 1 OF 1

Installation Instructions for Models VLFIGHRC-F


1. Read and follow the installation requirements of the door manufacturers.


- 2. Cut the hole in the door to correspond to the order size of the vision frame. Assure that the opening is plumb and square.
- 3. Prepare the cutout if required, per the door manufacturers installation instructions.
- 4. Using the vision frame mounting holes as a template, drill holes in the door for the through bolts.
- 5. Apply EPDM neoprene glazing Tape to the perimeter of the inside (back) of both sides of the vision frame to reduce potential moisture infiltration see illustration.
- 6. Apply Dow Corning 995 silicone glazing sealant to both sides of frame in a 1/2" wide strip see illustration. See also Manufacturer's instructions on tube.
- 7. Insert the corridor (exterior) side of the vision frame in the cutout.
- 8. Insert glazing into frame, seating firmly, using setting blocks as needed.
- 9. Place 7/32" O-ring on blank side of screws provided, and place 5/32" O-ring on Phillips head side of screws. Insert into the countersunk holes, carefully align the room side of the frame to the holes in the corridor side of the frame.
- 10. Screw in enough to hold frame in place for alignment, then insert the other screws lightly (with O-rings). Tighten the screws alternately in a criss-cross pattern to avoid putting more pressure on one side than the other. Do not tighten to the point of deflecting the frame.



Florida Building Code File # FL13187

Illustration below is of Vision Frame Placed Face Down in Order to Apply the Glazing Products

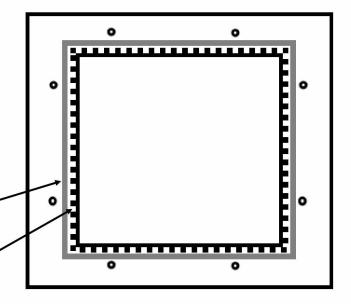

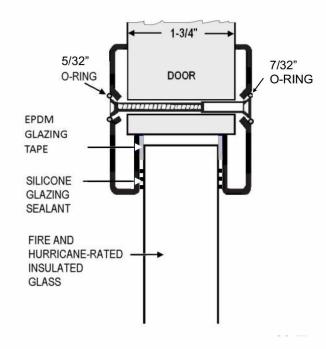





INSTALLATION INSTRUCTIONS FOR VLFIG-HRC-F PAK FIRE AND HURRICANE-RATED VISION LITE

HEADQUARTERS: 9702 NEWTON AV S, BLOOMINGTON, MN 55431 PH: 800-554-6077 FAX: 952-835-2218