


# THROUGH FRAME INSTALLATION

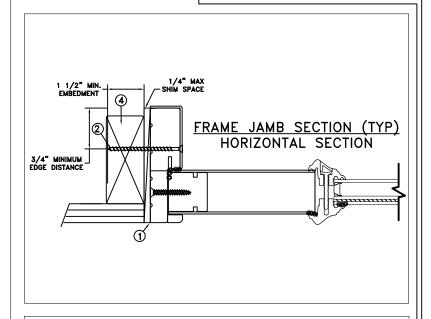

MAXIMUM FRAME	DP	IMPACT
$72-3/8" \times 80-7/16"$	+50/-50	YES
WZ3, MISSILE LEVEL D		

#### Installation Notes:

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk (typ.).
- Use #8 PPH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42)
- Use #8 x 2" SFH or greater fastener through the threshold with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42)
- perly transgineer of record to a single sing Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

## **General Notes:**

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- At minimum, glazing is 3.2mm annealed 13.5mm airspace 3.2mm annealed 2.3mm PVB Interlayer by Kurraray - 3.2mm annealed insulated glass.
- Use structural or composite shims where required.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.ield-wen.com.

# DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.



3737 LAKEPORT BLVD. FLDWEN KLAMATH FALLS OR, 97601

PHONE: (800) 535-3936


1 OF 5


ARCHITECTURAL FIBERGLASS OUTSWING OXO HIGH DAM SILL, IMPACT

DRAWING NAME

IDENTIFIER No. H9983.02-301-47 RO CAD DWG. No.:



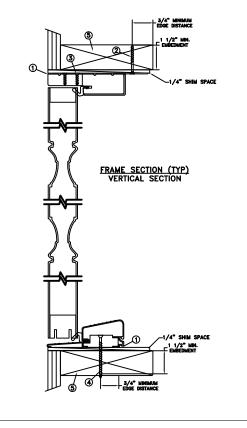

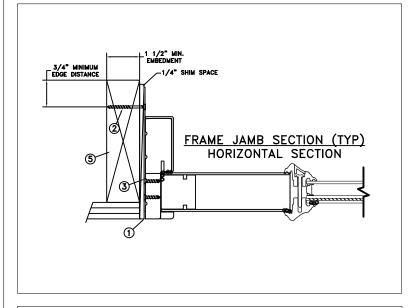

MAXIMUM FRAME	DP	IMPACT
72-3/8" x $80-7/16$ "	+50/-50	YES
WZ3, MISSILE LEVEL D		

## Installation Notes:

2" FROM

MULLIONS

TYP.

- Seal flange/frame to substrate.
- Use 2 #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the masonry or buck.. For concrete (min. fc = 2000 psi) or masonry substrate (CMU shall adhere to ASTM C90).

4" FROM

CORNERS

18 1/2" O.C.

-MID SPAN

- Use 2 #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visability or collateral damage to product.
- Use #8 x 2" SFH or greater fastener through the threshold with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42)

Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer or and increase of installation. project of installation. ★ PROTEIN HERMES


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

# DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


# **General Notes:**

- The product shown herein is designed tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- At minimum, glazing is 3.2mm annealed 13.5mm airspace 3.2mm annealed 2.3mm PVB Interlayer by Kurraray - 3.2mm annealed insulated glass.
- Use structural or composite shims where required.

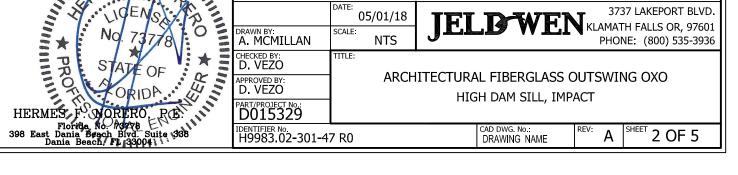

# THROUGH FRAME INSTALLATION

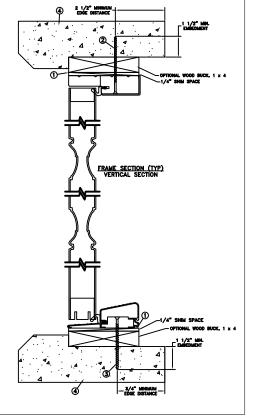

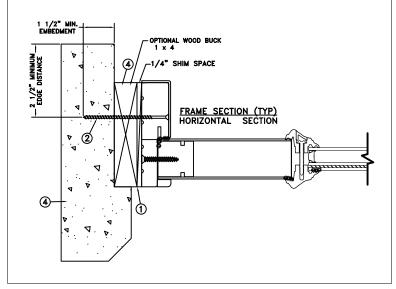

MAXIMUM FRAME	DP	IMPACT
72-3/8" x 80-7/16"	+50/-50	YES
WZ3, MISSILE LEVEL D		

# Installation Notes:

2" FROM

MULLIONS

TYP.

- Seal flange/frame to substrate.
- Use 3/16" Elco Tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1 1/2" into concrete or masonry at each location with a 2 1/2" min. from edge distance. For concrete (min. fc = 2000 psi) or masonry substrate (CMU shall adhere to ASTM C90).

4" FROM

CORNERS

18 1/2" O.C.

-MID SPAN

- Use #8 SFH or greater fastener through the threshold with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42)
- HERMES FOR East Danie Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


# **General Notes:**


- The product shown herein is designed tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- At minimum, glazing is 3.2mm annealed 13.5mm airspace 3.2mm annealed 2.3mm PVB Interlayer by Kurraray - 3.2mm annealed insulated glass.
- Use structural or composite shims where required.


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.ield-wen.com.

#### DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

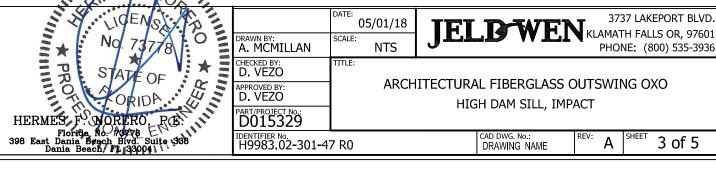

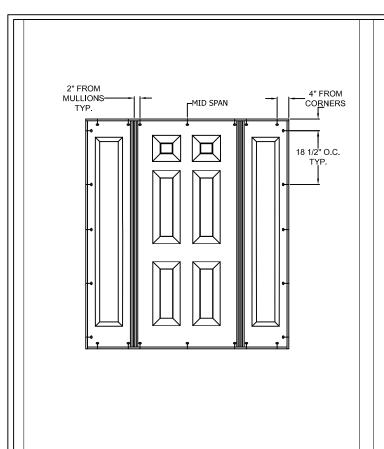

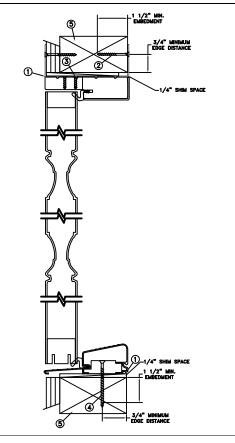

# MASONRY STRAP INSTALLATION

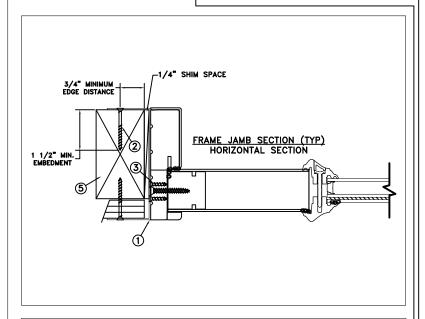

MAXIMUM FRAME	DP	IMPACT
72-3/8" x 80-7/16"	+50/-50	YES
WZ3, MISSILE LEVEL D		

#### Installation Notes:

- Seal flange/frame to substrate.
- Use min. 2 #8 PPH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck.
- Use min. 2 #8 PPH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visability or collateral damage to product.
- Use #8 x 2" SFH or greater fastener through the threshold with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42)
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

WILLIAM TOTAL

PRO


## **General Notes:**

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- At minimum, glazing is 3.2mm annealed 13.5mm airspace 3.2mm annealed 2.3mm PVB Interlayer by Kurraray - 3.2mm annealed insulated glass.
- Use structural or composite shims where required.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

# DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

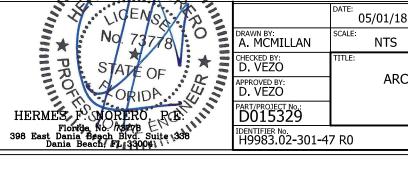


TELDWEN KLAMATH FALLS OR, 97601


3737 LAKEPORT BLVD.

PHONE: (800) 535-3936


ARCHITECTURAL FIBERGLASS OUTSWING OXO HIGH DAM SILL, IMPACT

CAD DWG. No.: 4 of 5 DRAWING NAME

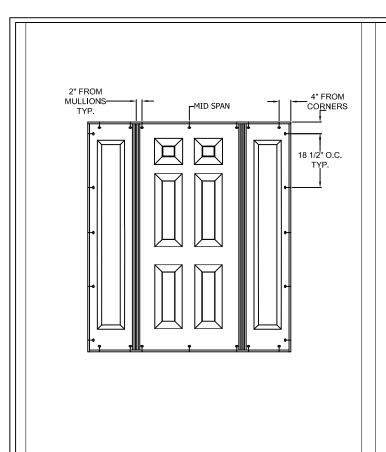

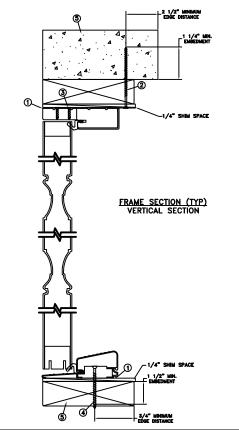

# MASONRY STRAP INSTALLATION

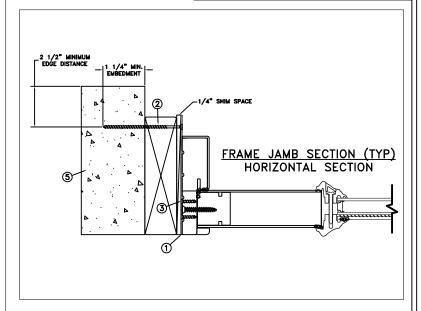

MAXIMUM FRAME	DP	IMPACT
72-3/8" x 80-7/16"	+50/-50	YES
WZ3, MISSILE LEVEL D		

# Installation Notes:

- 1. Seal flange/frame to substrate.
- 2. Use 3/16" Elco Tapcon or equivalent fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into concrete or masonry at each location with a 2 1/2" min. from edge distance. For concrete (min. fc = 2000 psi) or masonry substrate (CMU shall adhere to ASTM C90)..
- 3. Use min. 2 #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visability or collateral damage to product.
- 4. Use #8 x 2" SFH or greater fastener through the threshold with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42)

Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of source for the project of installation.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

# DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

## **General Notes:**

- The product shown herein is designed,tested and manufactured to comply with the wind load criteria
  of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida
  Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- At minimum, glazing is 3.2mm annealed 13.5mm airspace 3.2mm annealed 2.3mm PVB Interlayer by Kurraray - 3.2mm annealed insulated glass.
- 4. Use structural or composite shims where required.

