


THROUGH FRAME INSTALLATION

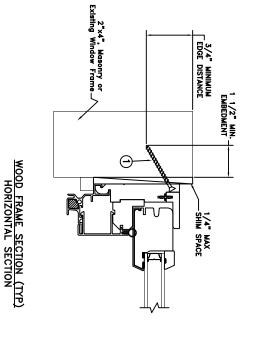

5 NO	+35/-35	7/32	× 91	3/8	99
IMPACT	DP	е	Frame	Max	

NOTE: Caulk between Jamb & Wood Opening.

TYPICAL ELEVATION WITH FASTENER SPACING

- 2 Installed Fastener Schedule: All windows: install corrosion resistant #8 fasteners no more than 4" from each corner and 16" o.c. through pre-drilled holes in the head and side jambs of the window.
- Fasteners must be long enough to penetrate at least 1-1/2" into framing members.

General Notes:

- Florida building code. The product shown herein is designed and manufactured to comply with the current edition of the
- Buck, framing and masonry by others and is responsibility of architect or engineer of record All glazing shall conform to ASTM E1300.

ωΝ

		DATE: 05/16/2018	
This schedule addresses only the fasteners required to anchor the unit	DRAWN BY:	SCA	
to achieve the rated design pressure and impact performance (where	J.HAV	J.HAWKINS NIS	PHONE: (800) 535-3936
to the installation process and does not address the sealing	CHECKED BY:	D BY: TITLE:	
consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the	APPROVED BY:	APPROVED BY:	Siteline Clad Pocket DH Picture Window
unit or go to www.jeld-wen.com.	D.ST(D.STOKES	
DISCLAIMER:	PART/PRO	PART/PROJECT No.:	
This drawing and its contents are confidential and are not to be	D015174	5174	
reproduced or copied in whole or in part or used or disclosed to others	IDENTIFIER No.	TER No.	CAD DWG, No.: REV: SHEET

IDENTIFIER No.

SitelineCLPKTDH Cert CAD DWG No

> REV \triangleright

> > SHEET

except as authorized by JELD-WEN Inc.