

NAILFIN INSTALLATION

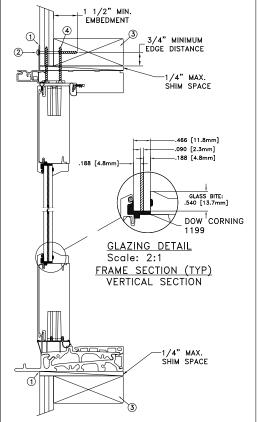

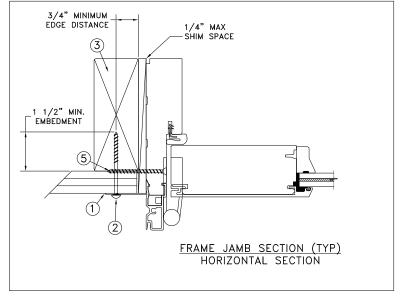

MAXIMUM	FRAME	DP	IMPACT
75 1/4 x	95 1/2	+50/-50	YES
WINDZONE 3			

Installation Notes:

Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).

TYPICAL ELEVATION WITH FASTENER SPACING

penetrate a minimum of 1 1/2" into the wood framing.

16" O.C.

TYP.

4" FROM

CORNERS

16" O.C.

HINGE

SCREWS

- Use #8 PH or greater fastener through the nailing flange with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42)
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.
- Use 2 #8 PH or greater fastener through the strike plate in the head with sufficient length to penetrate a minimum of 1 1/2" into the wood framing.

 Use 1 #8 PH or greater fastener through each hinge on the side large with sufficient length to

Florida No. 73778 398 East Dania Beach Blvd.

Dania Beach, FL 33004

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the


STRIKE SCREWS-

unit or go to www.jeld-wen.com.


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.




- The product shown herein is designed tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- At minimum, glazing shall be 4.8mm annealed 2.3mm SGP interlayer by Kuraray 4.8mm annealed monolithic glass.
- Use structural or composite shims where required.

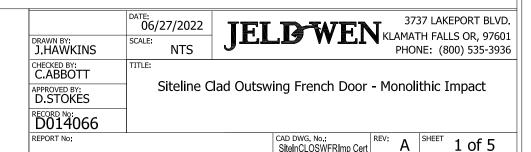

16" O.C. 4" FROM STRIKE SCREWS-CORNERS 16" O.C. TYP. HINGE SCREWS TYPICAL ELEVATION WITH FASTENER SPACING

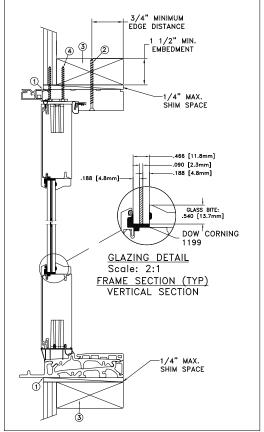

THROUGH FRAME INSTALLATION

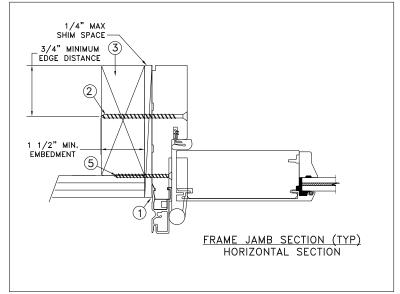

MAXIMUM	FRAME	DP	IMPACT
75 1/4 x	95 1/2	+50/-50	YES
WINDZONE 3			

Installation Notes:

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- 2. Use #8 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42)
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

4. Use 2 - #8 PH or greater fastener through the strike plate in the head with sufficient length to penetrate a minimum of 1 1/2" into the wood framing.

5. Use 1 - #8 PH or greater fastener through each hinge on the side jamb with sufficient enough to penetrate a minimum of 1 1/2" into the wood framing.

Florida No. 73778 398 East Dania Beach Blvd.

Dania Beach, FL 33004


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

General Notes:


- The product shown herein is designed, tested and manufactured to comply with the wind load criteria
 of the adopted International Building Code (IBC), the International Residential Code (IRC), the current
 Florida Building Code (FBC) and the industry requirement for the stated conditions.
- 2. All glazing shall conform to ASTM E1300.
- At minimum, glazing shall be 4.8mm annealed 2.3mm SGP interlayer by Kuraray 4.8mm annealed monolithic glass.
- 4. Use structural or composite shims where required.

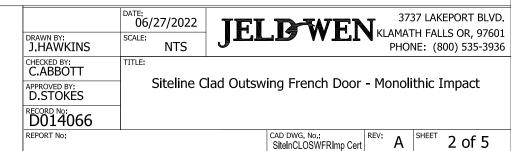

16" O.C. 4" FROM STRIKE SCREWS-CORNERS TYP. 16" O C TYP. HINGE SCREWS TYPICAL ELEVATION WITH FASTENER SPACING

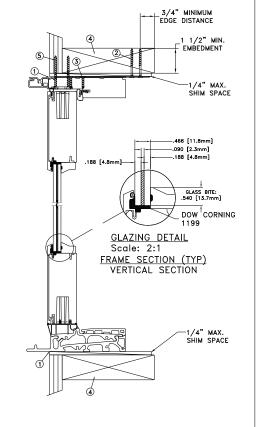

MASONRY STRAP INSTALLATION

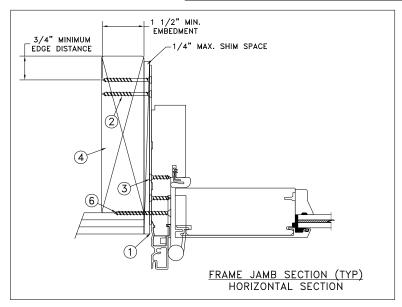

MAXIMUM	FRAME	DP	IMPACT
75 1/4 x	95 1/2	+50/-50	YES
WINDZONE 3			

Installation Notes:

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use 2 #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 $\frac{1}{2}$ " into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
- Use 2 #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visability or collateral damage to product.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the
- structure and is the responsibility of the architect/engineer of record for the project of installation.

 Use 2 #8 PH or greater fastener thru the strike plate in the head with sufficient length to penetrate a minimum

Florida No. 73778 398 East Dania Beach Blvd.

Dania Beach, FL 33004

Use 1 - #8 PH or greater fastener through each hinge on the side jambor minimum of 1 1/2" into the wood framing

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing

consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

General Notes:


- The product shown herein is designed tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- At minimum, glazing shall be 4.8mm annealed 2.3mm SGP interlayer by Kuraray 4.8mm annealed monolithic glass.
- Use structural or composite shims where required.
- Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.



16" O.C. 4" FROM STRIKE SCREWS-CORNERS TYP. 16" O.C. HINGE SCREWS TYPICAL ELEVATION WITH FASTENER SPACING

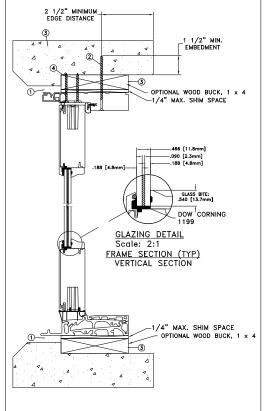

CONCRETE/MASONRY INSTALLATION

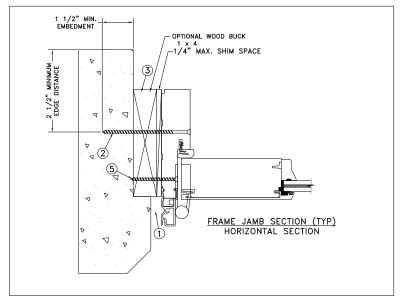

MAXIMUM FF	RAME	DP	IMPACT
75 1/4 x 95	5 1/2	+50/-50	YES
WINDZONE 3			

Installation Notes:

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1 1/2" into concrete or masonry at each location with a 2 1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.
- Use 2 #8 PH or greater fasteners through the strike plate in the head with sufficient length to penetrate

Use 1 - #8 PH or greater fastener through each hinge on the side jam a minimum of 1 1/2" into the wood framing.

Florida No. 73778 398 East Dania Beach Blvd.

Dania Beach, FL 33004


Suite 338


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

General Notes:


- The product shown herein is designed tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- At minimum, glazing shall be 4.8mm annealed 2.3mm SGP interlayer by Kuraray 4.8mm annealed monolithic glass.
- Use structural or composite shims where required.

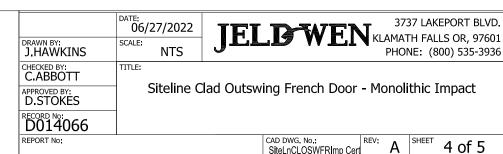

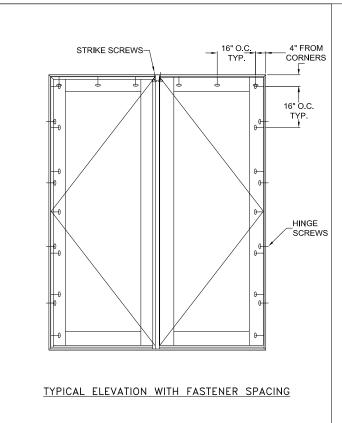

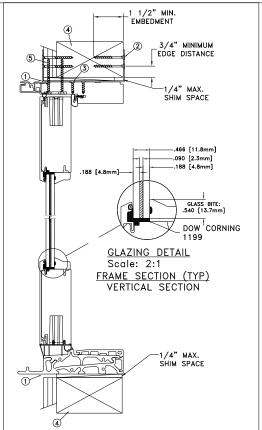

MASONRY STRAP INSTALLATION

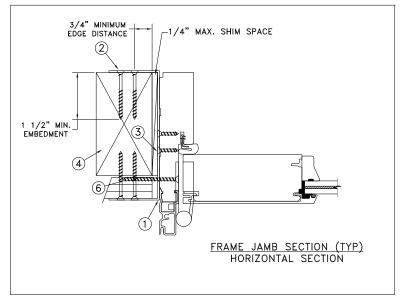

MAXIMUM FRAME	DP	IMPACT	
75 1/4 x 95 1/2	+50/-50	YES	
WINDZONE 3			

Installation Notes:

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use 2 #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 $\frac{1}{2}$ " into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
- Use 2 #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visability or collateral damage to product.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the
- structure and is the responsibility of the architect/engineer of record for the project of installation.

 Use 2 #8 PH or greater fastener thru the strike plate in the head with sufficient length to penetrate a minimum

Use 1 - #8 PH or greater fastener thru the hinge on the side jamb with of 1 1/2" into the wood framing ate aminimum

Florida No. 73778 398 East Dania Beach Blvd.

Dania Beach, FL 33004

Suite 338

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.



- The product shown herein is designed tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- At minimum, glazing shall be 4.8mm annealed 2.3mm SGP interlayer by Kuraray 4.8mm annealed monolithic glass.
- Use structural or composite shims where required.
- Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.

