

- JAMB SCREW INSTALLATION METHOD:**
- UNIT MUST NOT BE IN DIRECT CONTACT WITH EITHER CONCRETE OR TREATED BUCK MATERIAL. IF SHIM SPACE IS LESS THAN 1/8" WRAPPING THE JAMBS AND HEAD JAMBS WITH WINDOW FLASHING TAPE IS REQUIRED AS A BARRIER BETWEEN THE UNIT AND CONCRETE OR TREATED LUMBER.
  - SECURE THE JAMBS WITH #10 X 3" SCREWS SPACING 6" FROM CORNER AND 15" OC
  - MINIMUM OF 2 PER SIDE.
  - SHIM AT EACH SCREW AND BRACKET LOCATION
  - APPLY FIVE #10 X 3" SCREWS INTO SILL REINFORCEMENT FOR OXXO
  - APPLY SEVEN #8 X 3" SCREWS INTO EACH HEADER TRACK
  - APPLY #8 X 1 1/2" SCREWS THROUGH SILL SPACED 15" OC
  - NAILING FIN SHOWN BUT IS OPTIONAL
  - STRUCTURAL BRACKETS INSTALLED ABOVE STATIONARY PANELS 6" FROM CORNERS AND 15" OC

**NOTES:**

- THIS PRINT IS FOR STRUCTURAL PERFORMANCE ONLY. FOR FLASHING & SEALING REQUIREMENTS, REFER TO THE INSTALLATION INSTRUCTIONS. SHIMS:
  - A SHIM MUST BE PLACED 4-6" FROM EACH CORNER.
  - ALL OTHERS MUST BE PLACED A MAX OF 15 INCHES APART.
- IF CHEMICALLY TREATED LUMBER IS USED FOR BUCK MATERIAL, FASTENERS INTO THE BUCK MUST BE A MINIMUM OF 0.90 OZ/FT<sup>2</sup> ZINC HOT DIPPED GALVANIZED OR STAINLESS STEEL TYPE 304 OR 316.
- APPLIES TO 4-9/16 AND 6-9/16 FRAMES, 4-9/16 SHOWN USED THROUGH FRAME HARDWARE

UNIT	MAX PANEL WIDTH	MAX FRAME SIZE	PG
USFDG2 OXXO	49 1/2	191 X 98	+40/-40
USFDG2 OXO	49 1/2	146 1/4 X 98	+40/-40
USFD2.25G2 OXXO	49 1/2	191 X 122	+40/-40
USFD2.25G2 OXO	49 1/2	146 1/4 X 122	+40/-40
USFD2.25G2 OXO	61 1/2	182 1/4 X 122	+30/-30
USD2.25 OXO	60 5/8	181 3/8 X 98	+40/-40
USD2.25 OXXO	48 5/8	191 X 98	+30/-30
USD2.25 OXO	36 5/8	109 3/8 X 122	+30/-30
USD2.25 OXXO	36 5/8	143 X 122	+30/-30
USD2.25 OXXO	36 5/8	143 X 98	+40/-40
USD OXO	48 5/8	145 5/8 X 98	+30/-30
USD OXXO	48 5/8	145 5/8 X 82	+40/-40
USD OXXO	36 5/8	143 X 98	+25/-25
USD OXXO	48 5/8	191 X 82	+25/-25





\*GLASS COMPLIES WITH ASTM E1300\*

**GLAZING DETAIL**

**CATEGORY:**  
SLIDING DOOR, SLIDING FRENCH DOOR,

**UNIT TYPE:**  
USD, USD2.25, USFDG2, USFD2.25G2,

ITEM NO	REF NO	DESCRIPTION	UNSPECIFIED TOLERANCES
8	-----	#10 X 3" WOOD SCREW	DECIMALS: XX ± .03
7	-----	#8 X 1 1/2" SCREW	ANGLE DEG: ± .5
6	-----	STRUCTURAL BRACKET	XXX ± .012
5	-----	#8 X 5/8" SCREW	LINEAL: ± .125
4	-----	2X WOOD BUCK BY OTHERS	FAB LINEAL: ± NA
3	-----	SHIM	- .000
2	-----	#10 X 2 1/2" WOOD SCREW	MATERIAL: NA
1	-----	#8 X 3" WOOD SCREW	

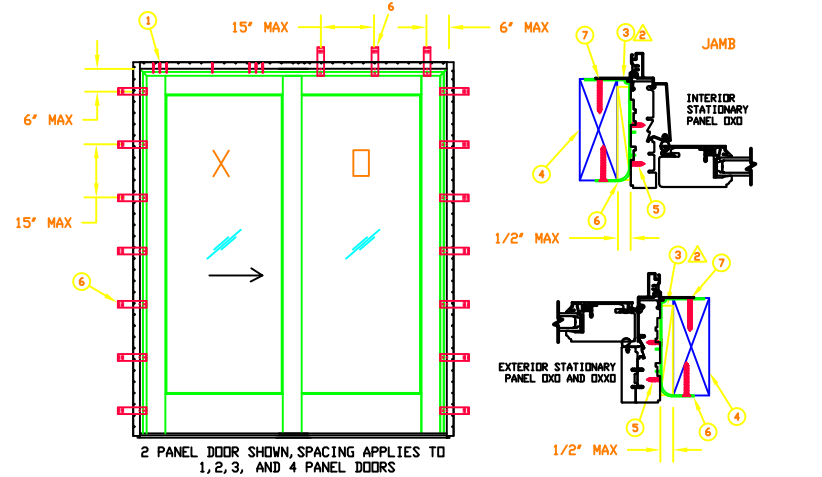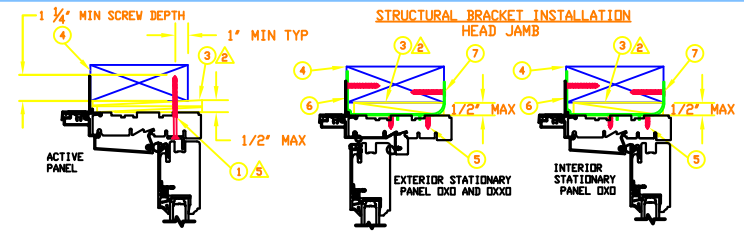

- STRUCTURAL BRACKET INSTALLATION METHOD:**
- UNIT MUST NOT BE IN DIRECT CONTACT WITH EITHER CONCRETE OR TREATED BUCK MATERIAL. IF SHIM SPACE IS LESS THAN 1/8" WRAPPING THE JAMBS AND HEAD JAMB WITH WINDOW FLASHING TAPE IS REQUIRED AS A BARRIER BETWEEN THE UNIT AND CONCRETE OR TREATED LUMBER.
  - MINIMUM OF 2 BRACKETS PER SIDE.
  - SCREWS LISTED BELOW MUST BE FULLY EMBEDDED.
  - ATTACH TO THE UNIT WITH TWO #8 X 3/8" SCREWS.
  - ATTACH TO THE BUCK WITH TWO #8 X 1 1/2" SCREWS ON EACH SIDE OF THE BUCK.
  - APPLY FIVE #10 X 3" SCREWS INTO SILL REINFORCEMENT FOR OXXO
  - APPLY SEVEN #8 X 3" SCREWS INTO EACH HEADER TRACK
  - APPLY #8 X 1 1/2" SCREWS THROUGH SILL SPACED 15" OC
  - NAILING FIN SHOWN BUT IS OPTIONAL

**MARVIN** RESEARCH & DEVELOPMENT

COLLECTION: ULTIMATE

DWG TYPE: INSTALLATION  
DESCRIPTION: OXXO AND OXO INSTALLATION

CHK:	SIZE: B	CLASS: MISC	DWG NO: 00135449
APP:	SCALE: NA	DATE: 10/5/2022	DWG BY: BALDWIN, JACOB SHEET: 1 OF 1

**NOTICE - CONFIDENTIAL INFORMATION**

The information in this document is privileged and strictly confidential. The information contained herein shall be used only by Marvin Windows and Doors employees and by those agents or suppliers granted official written permission. If the reader of this document is not the intended recipient, or the employee or agent of the intended recipient, please delete this document from all data storage devices, and destroy all hard copies. Any unauthorized dissemination, distribution, copying or other use of the information contained in this document is strictly prohibited.