


face of arm.


\*Please adhere to all local laws and building codes.

by DIVERSITECH

QSMS2400

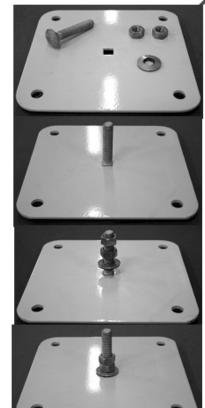

 Insert 3/8"-16x2" Carriage Bolt through bottom of foot.

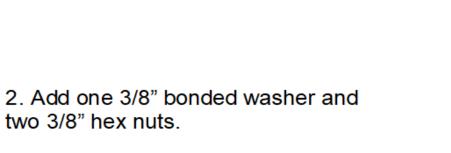



6. Attach the two stability arms to the sides of the stand. Insert one 3/8"-16 x 1 3/4" Hex Bolt, 3/8" Split Washer and 3/8" nut to hole on face of arm.

5. Attach arms to completed U-Bars.

Split Washer and 3/8" nut to hole on

Insert one 3/8"-16 x 1 3/4" Hex Bolt, 3/8"



Screw on the adjustment U-Bar until foot is locked in place.



7. Mount unit to stand and insert in slot one 3/8"-16 x 1 ½" bolt, two 3/8" galvanized washers, one rubber washer, one 3/8" split washer and one 3/8" nut.



4. Remove Hex Bolts and washers from the adjustment U-Bars to adjust to your desired width (Adjusts in 1" increments).



8. Bolt unit to foundation (Hardware not included).

\*As of 1/1/2015 Quick-Sling offers a 2-year warranty on steel & workmanship; Quick-Sling products are coated in accordance with ASTM D3451-06.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES [MILLIMETERS]
TOLERANCES ARE: ANGLES ±1.0°
FRACTIONAL SIZES X/Y ±1/64

INCHES [MILLIMETERS]
X = ±0.1 [X = ±2.5]
XX = ±0.01 [X = ±1.3]

YX = ±0.00E [X = ±0.43]

THIRD ANGLE



CONFIDENTIAL - PROPRIETARY - DO NOT COPY	ASSEMBLY: QSMS3001	WEIGHT
THE INFORMATION SET FORTH IN THIS DOCUMENT AND RELATED	QOINIO0001	GMS.
INFORMATION IS THE CONFIDENTIAL PROPERTY OF DIVERSITECH CORPORATION, AND IS NOT TO BE COPIED OR	DWG. NO.	GIVIO.
REPRODUCED OR DISTRIBUTED IN ANY FORM WITHOUT PRIOR WRITTEN PERMISSION FROM DIVERSITECH CORPORATION.	FL-44215.3	REV.
DO NOT SCALE DRAWING	11-44213.3	1
DESCRIPTION		SHEET
		2056

4 2


## QUICK-SLING®

by DiversiTech

QSMS2401



1. Insert 3/8"-16x2" Carriage Bolt through bottom of foot.






3. Screw on the adjustment U-Bar until foot is locked in place.



4. Remove Hex Bolts and Washers from the adjustment U-Bars to adjust to your desired width (Adjusts in 1" increments).

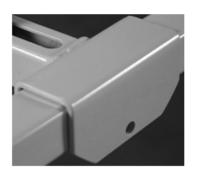

5. Attach arms to completed U-Bars. Insert one 3/8"-16 x 1 3/4" Hex Bolt, 3/8" Split Washer and 3/8" Nut to hole on face of arm.



6. Attach the two stability arms to the sides of the stand. Insert one 3/8"-16 x 1 3/4" Hex Bolt, 3/8" Split Washer and 3/8" Nut to hole on face of arm.



7. Mount unit to stand and insert in slot one 3/8"-16 x 1 ½" Bolt, two 3/8" Galvanized Washers, one Rubber Washer, one 3/8" Split Washer and one 3/8" Nut.



8. Bolt unit to foundation (Hardware not included).

\*As of 1/1/2015 Quick-Sling offers a 2-year warranty on steel & workmanship; Quick-Sling products are coated in accordance with ASTM D3451-06.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES [MILLIMETERS]
TOLERANCES ARE: ANGLES ±1.0°
FRACTIONAL SIZES XY ±1/64

INCHES [MILLIMETERS]
X = ±0.1 [X = ±2.5]
XX = ±0.01 [X = ±1.3]
XY = ±0.05 [X = ±0.4]
THIRD ANGLE



CONFIDENTIAL - PROPRIETARY - DO NOT COPY	ASSEMBLY:	QSMS3001	WEIGHT
THE INFORMATION SET FORTH IN THIS DOCUMENT AND RELATED INFORMATION IS THE CONFIDENTIAL PROPERTY OF DIVERSITECH		QCIVICO001	GMS.
CORPORATION, AND IS NOT TO BE COPIED OR	DWG. NO.		GIVIO.
REPRODUCED OR DISTRIBUTED IN ANY FORM WITHOUT PRIOR WRITTEN PERMISSION FROM DIVERSITECH CORPORATION.		FL-44215.3	REV.
DO NOT SCALE DRAWING		11-44215.5	1
DESCRIPTION	· · · · · ·		3 SHEET

\*Please adhere to all local laws and building codes.

### QUICK-SLING®

by DIVERSITECH





1. Insert 3/8"-16x2" Carriage Bolt through bottom of foot.

2. Add one 3/8" bonded washer and two 3/8" hex nuts.




5. Attach arms to completed U-Bars. Insert one 3/8"-16 x 1 3/4" Hex Bolt, 3/8" Split Washer and 3/8" nut to hole on face of arm.




6. Attach the two stability arms to the sides of the stand. Insert one 3/8"-16 x 1 3/4" Hex Bolt, 3/8" Split Washer and 3/8" nut to hole on face of arm.




7. Mount unit to stand and insert in slot one 3/8"-16 x 1 1/2" bolt, two 3/8" galvanized washers, one rubber washer, one 3/8" split washer and one 3/8" nut.

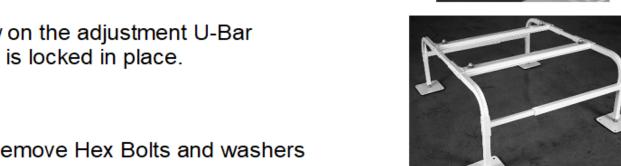

8. Bolt unit to foundation (Hardware not included).





\*As of 1/1/2015 Quick-Sling offers a 2-year warranty on steel & workmanship; Quick-Sling products are coated in accordance with ASTM D3451-06.



CONFIDENTIAL - PROPRIETARY - DO NOT COPY	ASSEMBLY:	QSMS3001	WEIGHT
THE INFORMATION SET FORTH IN THIS DOCUMENT AND RELATED INFORMATION IS THE CONFIDENTIAL PROPERTY OF DIVERSITECH		QUIVIOUUT	— GMS.
CORPORATION, AND IS NOT TO BE COPIED OR	DWG. NO.		GIVIO.
REPRODUCED OR DISTRIBUTED IN ANY FORM WITHOUT PRIOR WRITTEN PERMISSION FROM DIVERSITECH CORPORATION.		FL-44215.3	REV.
DO NOT SCALE DRAWING		16-44213.3	1
DESCRIPTION			SHEET
			4 of 6

\*Please adhere to all local laws and building codes.

## QUICK-SLING°

by DIVERSITECH

QSMS2405



1. Insert 3/8"-16x2" Carriage Bolt through bottom of foot.


2. Add one 3/8" bonded washer and two 3/8" hex nuts.



3. Screw on the adjustment U-Bar until foot is locked in place.



4. Remove Hex Bolts and washers from the adjustment U-Bars to adjust to your desired width (Adjusts in 1" increments).

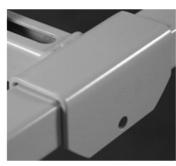

5. Attach arms to completed U-Bars. Insert one 3/8"-16 x 1 3/4" Hex Bolt, 3/8" Split Washer and 3/8" nut to hole on face of arm.



6. Attach the two stability arms to the sides of the stand. Insert one 3/8"-16 x 1 3/4" Hex Bolt, 3/8" Split Washer and 3/8" nut to hole on face of arm.



7. Mount unit to stand and insert in slot one 3/8"-16 x 1 1/2" bolt, two 3/8" galvanized washers, one rubber washer, one 3/8" split washer and one 3/8" nut.



8. Bolt unit to foundation (Hardware not included).

\*As of 1/1/2015 Quick-Sling offers a 2-year warranty on steel & workmanship; Quick-Sling products are coated in accordance with ASTM D3451-06.

JNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES [MILLIMETERS]
TOLERANCES ARE: ANGLES ±1.0°
FRACTIONAL SIZES X/Y ±1/64



CONFIDENTIAL - PROPRIETARY - DO NOT COPY	ASSEMBLY:	QSMS3001	WEIGHT
THE INFORMATION SET FORTH IN THIS DOCUMENT AND RELATED INFORMATION IS THE CONFIDENTIAL PROPERTY OF DIVERSITECH		QCIVICO001	GMS.
CORPORATION, AND IS NOT TO BE COPIED OR	DWG. NO.		GIVIO.
REPRODUCED OR DISTRIBUTED IN ANY FORM WITHOUT PRIOR WRITTEN PERMISSION FROM DIVERSITECH CORPORATION.		FL-44215.3	REV.
DO NOT SCALE DRAWING	11-44219.5	1	
ESCRIPTION			SHEET
			5 6

# QUICK-SLING°

by DIVERSITECH

### **QSTD3000**


\*Please adhere to all local laws and building codes.



1. Insert 3/8"-16x2" Carriage Bolt through bottom of foot.



5. Remove the factory screws from the bottom of your equipment, slide the clips to that location and screw the factory screws through the clip into your equipment.





6. Attach arms to completed U-Bars. Insert one 3/8"-16 x 1 3/4" Hex Bolt, 3/8" Split Washer and 3/8" Nut to hole on face of arm.

Peel and stick rubber vibration isolation pads. Can be used where necessary, depending on unit type.



3. Screw on the adjustment U-Bar until foot is locked in place.



7. Attach the two stability arms to the sides of the stand. Insert one 3/8"-16 x 1 3/4" Hex Bolt, 3/8" Split Washer and 3/8" Nut to hole on face of arm.



4. Remove Hex Bolts and Washers from the adjustment U-Bars to adjust to your desired width (Adjusts in 1" increments).



8. Bolt unit to foundation (Hardware not included).

\*As of 1/1/2015 Quick-Sling offers a 2-year warranty on steel & workmanship; Quick-Sling products are coated in accordance with ASTM D3451-06.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES [MILLIMETERS]
TOLERANCES ARE: ANGLES ±1.0°
FRACTIONAL SIZES XIY ±1/64
INCHES [MILLIMETERS]
.X = ±0.1 [X = ±2.5]
.XX = ±0.01 [X = ±1.3]
.XY = ±0.05 [XY = ±0.43]



ONFIDENTIAL - PROPRIETARY - DO NOT COPY	ASSEMBLY:	QSMS3001	WEIGHT
INFORMATION SET FORTH IN THIS DOCUMENT AND RELATED ORMATION IS THE CONFIDENTIAL PROPERTY OF DIVERSITECH		QCIVICOUU I	GMS.
CORPORATION, AND IS NOT TO BE COPIED OR  PRODUCED OR DISTRIBUTED IN ANY FORM WITHOUT PRIOR	DWG. NO.		
WRITTEN PERMISSION FROM DIVERSITECH CORPORATION.		FL-44215.3	REV.
DO NOT SCALE DRAWING	12 44213.0	1	
CRIPTION			SHEET
			60-6