



## THROUGH FRAME INSTALLATION

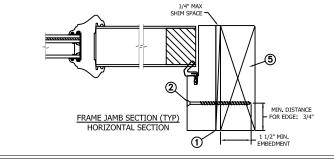

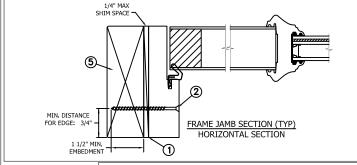

Max Frame	DP Rating	Impact
74" x 97 7/8"	+50/-55	YES

SHEET

## Installed Fastener Schedule:

- Seal flange/frame to substrate.
- 2. Use #12 PH or greater fasteners through frame with sufficient length to penetrate a minimum of 1 1/2" into the wood framing. For 2X wood frame substrate (min. S.G. = 0.42).
- Host structure (wood buck, stud framing and opening) to be designed and anchored to properly transfer all
  loads to the structure. The host structure is the responsibility of the architect or engineer of record for the
  project of installation.


## **General Notes:**

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) excluding HVHZ and the industry standard requirement for the stated conditions.
- 2. Buck, framing and masonry by others and is responsibility of architect or engineer of record.
- 3. All glazing shall conform to ASTM E1300.
- At minimum, glazing shall be 3.0mm tempered 14.11mm airspace 3.0mm annealed 2.29mm PVB Interlayer by Dupont - 3.0mm annealed insulating glass.

This schedule addresses only the fasteners required to anchor the window to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.


### DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

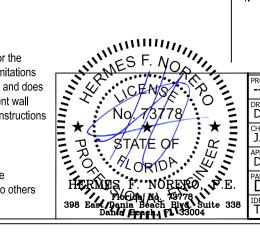


IDENTIFIER NO. PLANT NAME AND LOCATION: CAD DWG, No.: REV:

# 6" MAX. 4" FROM 3" FROM FROM **CENTER** CENTER **CORNERS** 14.33" O.C. MAX.

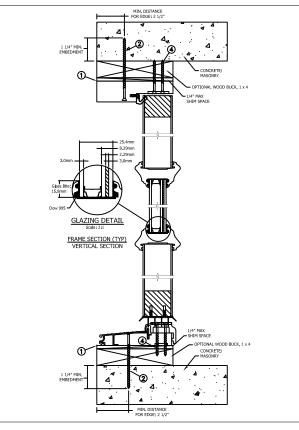

## THROUGH FRAME INSTALLATION

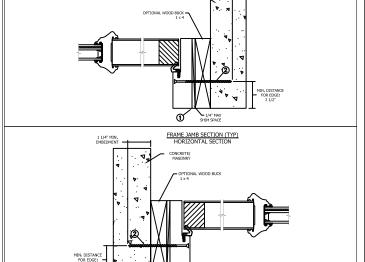

Max Frame	DP Rating	Impact
74" x 97 7/8"	+50/-55	YES

## Installed Fastener Schedule:

- Seal flange/frame to substrate.
- Use 3/16" Tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1 1/4" into concrete or masonry at each location with a 2 1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (min fc = 2000 psi) (CMU shall adhere to ASTM C90).
- Host structure (wood buck, stud framing and opening) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the AS PROPERTY AS A project of installation.

This schedule addresses only the fasteners required to anchor the window to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.

### DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

## **General Notes:**

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) excluding HVHZ and the industry standard requirement for the stated conditions.
- Buck, framing and masonry by others and is responsibility of architect or engineer of record.
- 3. All glazing shall conform to ASTM E1300.

NTS

At minimum, glazing shall be 3.0mm tempered - 14.11mm airspace - 3.0mm annealed - 2.29mm PVB Interlayer by Dupont - 3.0mm annealed insulating glass.

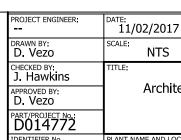


3737 Lakeport Blvd Klamath Falls, OR. 97601 Phone: (800) 535-3936


Architectural Fiberglass Glazed Inswing Impact Door

IDENTIFIER No.
TEL 01681715 PLANT NAME AND LOCATION; CAD DWG. No.: REV: SHEET

## 6" MAX. 4" FROM 3" FROM **FROM** CENTER -CENTER **CORNERS** 14.33" O.C. MAX.

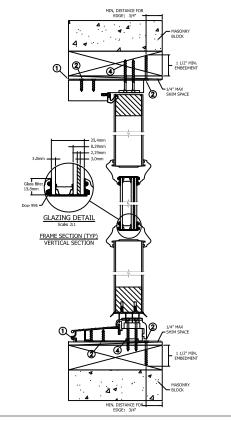

## MASONRY STRAP INSTALLATION

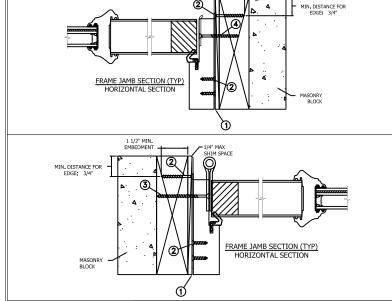

Max Frame

74" x 97 7/8"

## Installed Fastener Schedule:

- Seal flange/frame to substrate.
- Install masonry straps to wood frame using #8 corrosion resistant fasteners no more then 6" from each corner and 14" o.c. along the jambs and head. Bend straps around buck and secure with #8 fastener thru masonry strap into buck. Fasteners must be long enough to penetrate at least 1" into framing members.
- Host structure (wood buck, stud framing and opening) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


This schedule addresses only the fasteners required to anchor the window to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.

### DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

## **General Notes:**

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) excluding HVHZ and the industry standard requirement for the stated conditions.
- Buck, framing and masonry by others and is responsibility of architect or engineer of record.
- All glazing shall conform to ASTM E1300.
- At minimum, glazing shall be 3,0mm tempered 14,11mm airspace 3,0mm annealed 2,29mm PVB Interlayer by Dupont - 3.0mm annealed insulating glass.

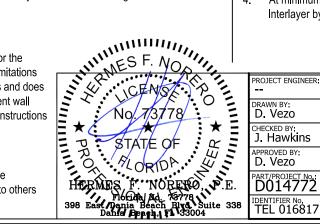

3737 Lakeport Blvd Klamath Falls, OR. 97601 Phone: (800) 535-3936

Impact

YES

Architectural Fiberglass Glazed Inswing Impact Door

PART/PROJECT No.: **D014772** IDENTIFIER No.
TEL 01681715

J. Hawkins

APPROVED BY:

D. Vezo

PLANT NAME AND LOCATION;

DATE: 11/02/2017

NTS

SCALE:


TITLE:


CAD DWG. No.:

SHEET


DP Rating


+50/-55

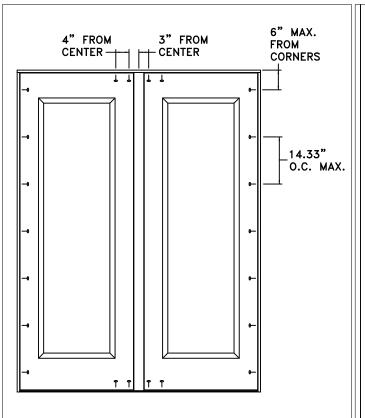

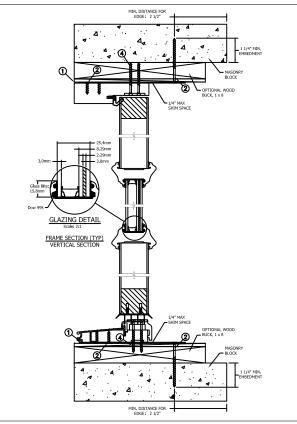

## MASONRY STRAP INSTALLATION

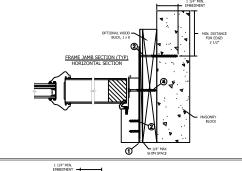

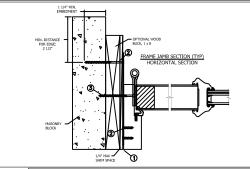

Max Frame	DP Rating	Impact
74" x 97 7/8"	+50/-55	YES

## Installed Fastener Schedule:

- Seal flange/frame to substrate.
- Use 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1 1/4" into concrete or masonry at each location with a 2 1/2" min. from edge distance. 2-#8 x 1/2" PH screws through the strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (min fc = 2000 psi) (CMU shall adhere to ASTM C90).
- Host structure (wood buck, stud framing and opening) to be designed and anchored to properly transfer all IN NO. 7 loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

This schedule addresses only the fasteners required to anchor the window to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.

#### DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

## **General Notes:**

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) excluding HVHZ and the industry standard requirement for the stated conditions.
- Buck, framing and masonry by others and is responsibility of architect or engineer of record.
- All glazing shall conform to ASTM E1300.
- 4. At minimum, glazing shall be 3.0mm tempered - 14.11mm airspace - 3.0mm annealed - 2.29mm PVB Interlayer by Dupont - 3.0mm annealed insulating glass.



3737 Lakeport Blvd Klamath Falls, OR. 97601 Phone: (800) 535-3936

Architectural Fiberglass Glazed Inswing Impact Door

IDENTIFIER No.
TEL 01681715 PLANT NAME AND LOCATION;


SCALE:


TITLE:

DATE: 11/02/2017


NTS


CAD DWG. No.: REV: SHEET

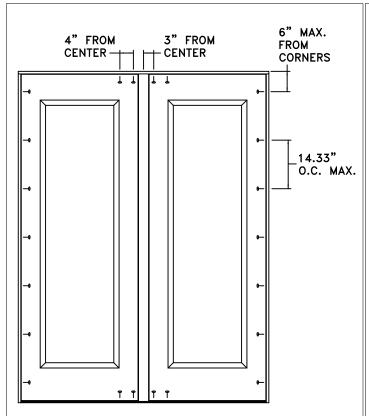

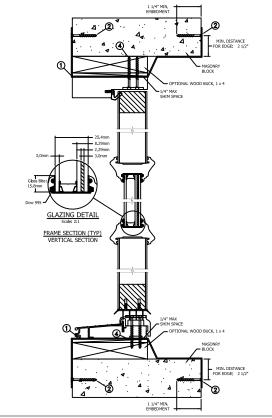

## MASONRY STRAP INSTALLATION

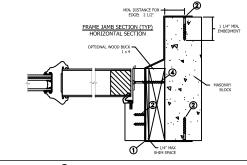

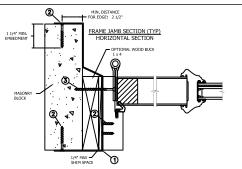

Max Frame	DP Rating	Impact
74" x 97 7/8"	+50/-55	YES

## Installed Fastener Schedule:

- Seal flange/frame to substrate.
- Use 3/16" Tapcon or equivalent fasteners through the interior and exterior of the strap with sufficient length to penetrate a minimum of 1 1/4" into concrete or masonry at each location with a 2 1/2" min. from edge distance. 2-#8 x 1/2" PH screws through the strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (min fc = 2000 psi) (CMU shall adhere to ASTM C90).
- Host structure (wood buck, stud framing and opening) to be designed and anchored to properly transfer all THE NOT THE PROPERTY OF THE REAL PROPERTY OF THE RE loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

This schedule addresses only the fasteners required to anchor the window to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.

#### DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

## **General Notes:**

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) excluding HVHZ and the industry standard requirement for the stated conditions.
- Buck, framing and masonry by others and is responsibility of architect or engineer of record.
- All glazing shall conform to ASTM E1300.

DATE: 11/02/2017

NTS

SCALE:

TITLE:

At minimum, glazing shall be 3.0mm tempered - 14.11mm airspace - 3.0mm annealed - 2.29mm PVB Interlayer by Dupont - 3.0mm annealed insulating glass.





JELD WEN

3737 Lakeport Blvd Klamath Falls, OR. 97601 Phone: (800) 535-3936


Architectural Fiberglass Glazed Inswing Impact Door


PART/PROJECT No.: PLANT NAME AND LOCATION; CAD DWG. No.: REV: SHEET

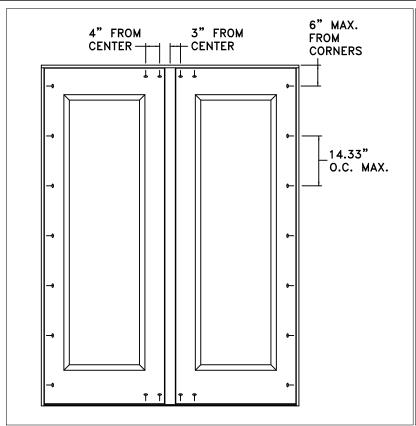

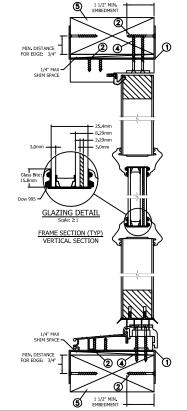

## MASONRY STRAP INSTALLATION

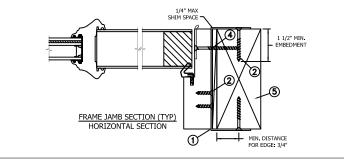

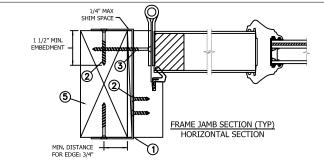

Max Frame	DP Rating	Impact
74" x 97 7/8"	+50/-55	YES

## Installed Fastener Schedule:

- Seal flange/frame to substrate.
- Install masonry straps to wood frame using #8 corrosion resistant fasteners no more then 6" from each corner and 14" o.c. along the jambs and head. Bend straps around buck to the interior and exterior, and secure with #8 fastener thru masonry strap into buck. Fasteners must be long enough to penetrate at least 1 1/2" into framing members. Minimum specific gravity = (Min. S.G. = 0.42).
- Host structure (wood buck, stud framing and opening) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


This schedule addresses only the fasteners required to anchor the window to achieve the rated design pressure up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the door or go to www.jeld-wen.com.

#### DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

## **General Notes:**

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the Florida Building Code (FBC) excluding HVHZ and the industry standard requirement for the stated conditions.
- Buck, framing and masonry by others and is responsibility of architect or engineer of record.
- All glazing shall conform to ASTM E1300.
- At minimum, glazing shall be 3.0mm tempered 14.11mm airspace 3.0mm annealed 2.29mm PVB Interlayer by Dupont - 3.0mm annealed insulating glass.

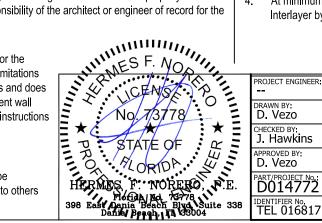

3737 Lakeport Blvd Klamath Falls, OR. 97601 Phone: (800) 535-3936

Architectural Fiberglass Glazed Inswing Impact Door

PART/PROJECT No.: D014772 IDENTIFIER No.
TEL 01681715

PLANT NAME AND LOCATION;

DATE: 11/02/2017

NTS

SCALE:

TITLE:

CAD DWG. No.:

REV:

SHEET